



Space Pole C-Frame

Installation Guide

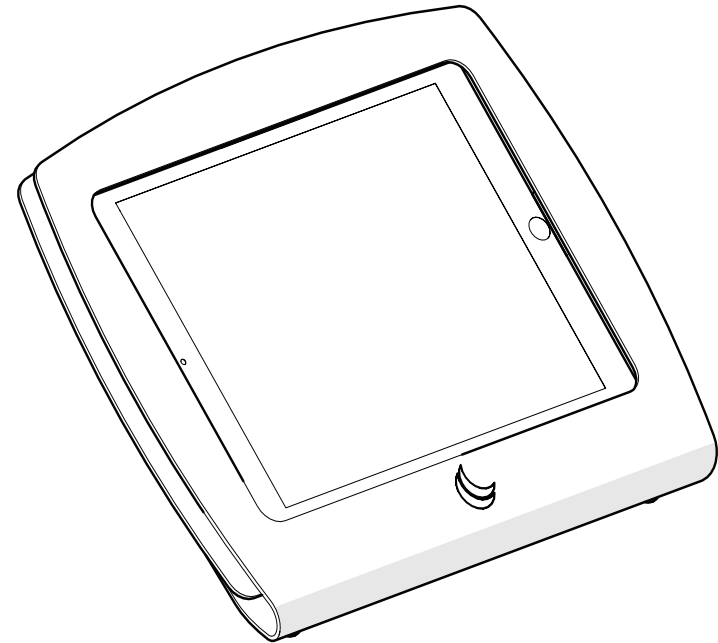


Open C-frame

1

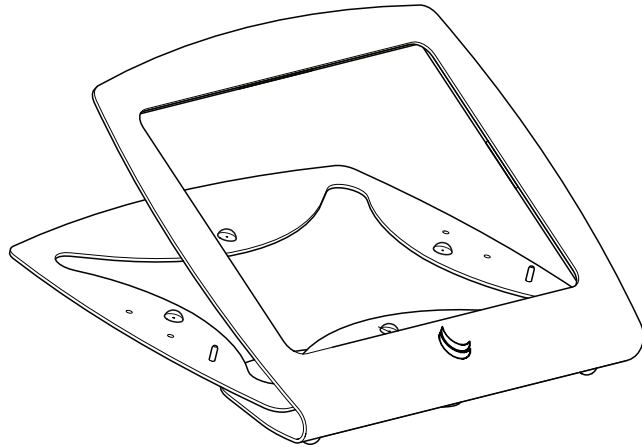


Cable mounting

2

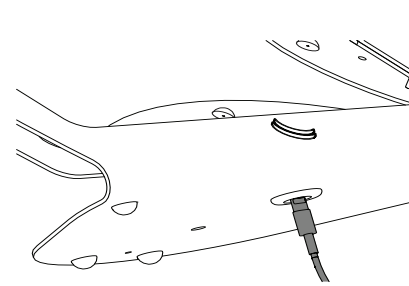

Run cable through grommet

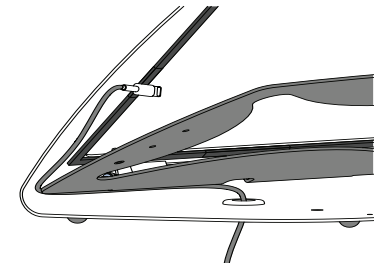


Drag to the side and plug in the tablet cable

Place tablet

3

Align tablet with screen cut-out

Place tablet on top of pads

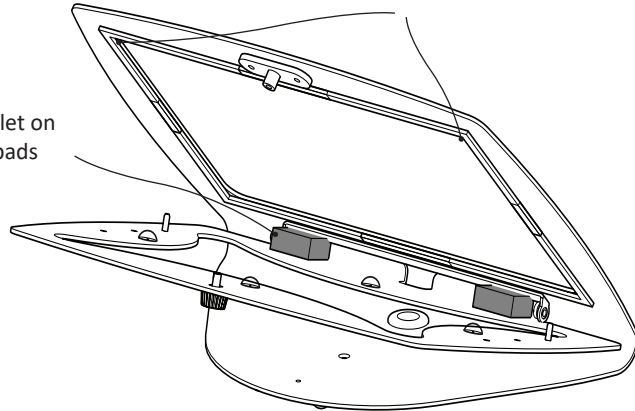

Close the lid with:

4

To fix the tablet - 1) Thumb screw - P22633-02

To secure the tablet - 2) Secure screw M4 - M9971-0408 - Allen key - M9971-0004

