



Landscape
Mode

Medium/Large Tablets

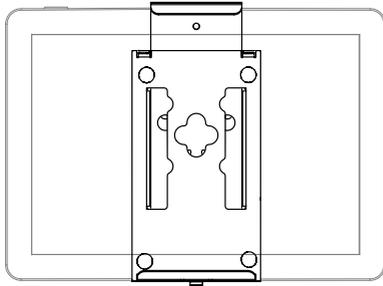


Small Tablets

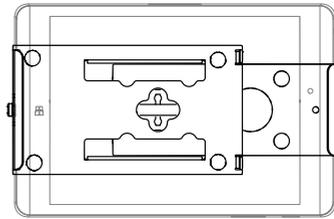


Portrait
Mode


Medium/Large Tablets

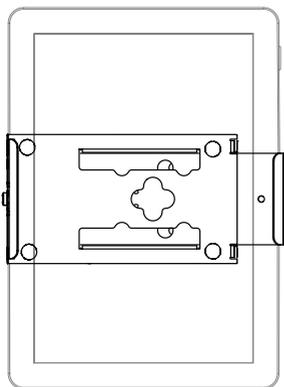


Small Tablets

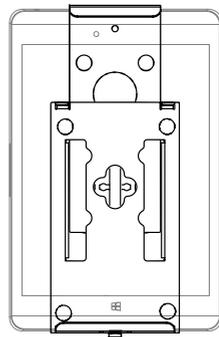


SpacePole U-Frame Installation Guide

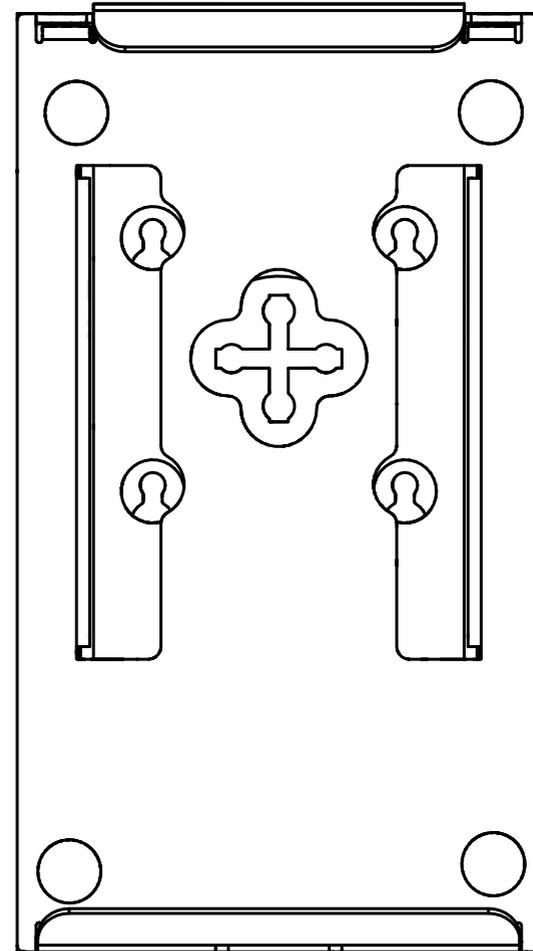


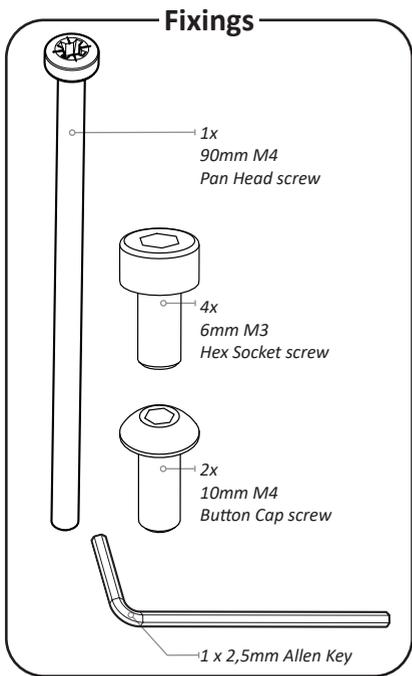


2a 40 x 40 mm Installation
Portrait / Landscape
Use Hex Socket screws
Screw in approx. 2,5mm

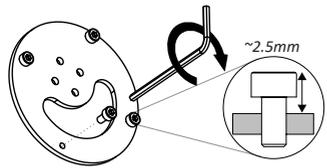


2b Insert U-Frame on screws
Larger keyhole first

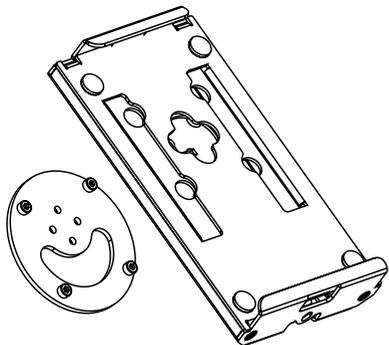


1 DuraTilt Installation
Portrait / Landscape
Use Button Cap screws

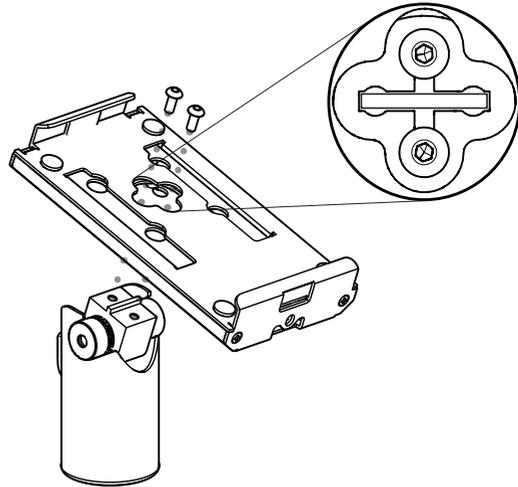


2c Slide U-Frame into place
Tighten fully using Allen Key

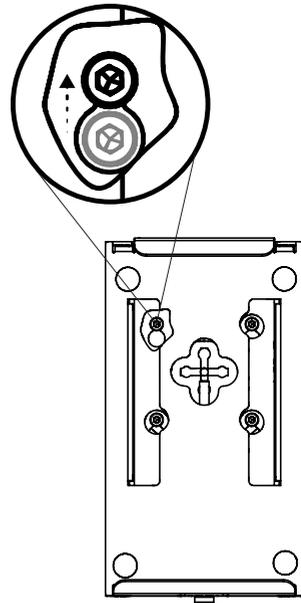


3a Insert Tablet by leveraging in
and push up against spring.
Keep both hands firmly on the
tablet at all times

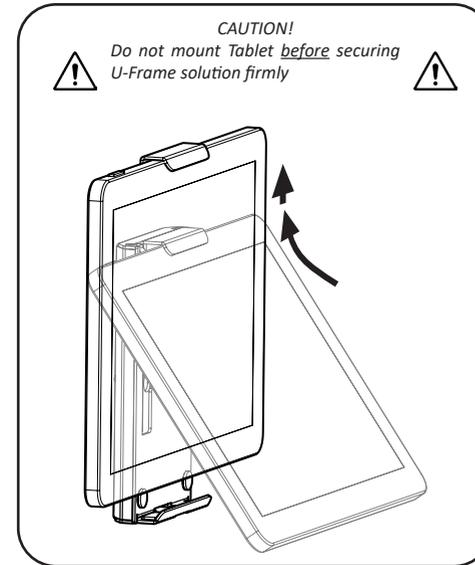


4a If security screw is used, first
screw 90mm Pan screw into
socket approx. 5-10mm

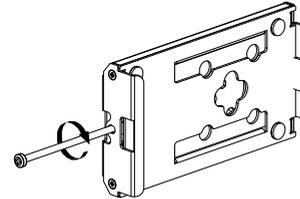


4b Insert Tablet - See step 3

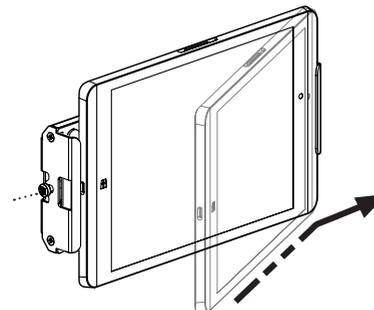

3b Lower Tablet under control
Do NOT just let go!

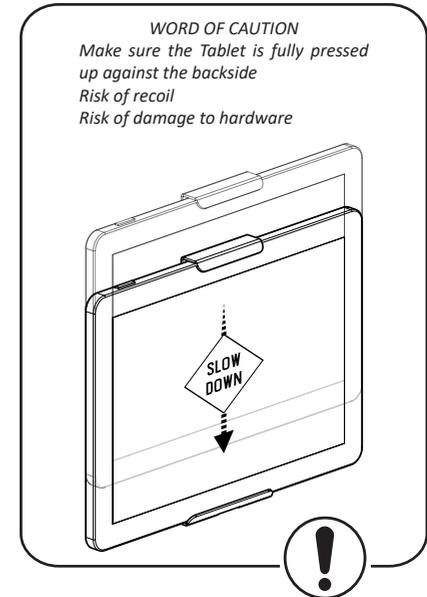

4c When fully inserted,
tighten screw (0.5N m)

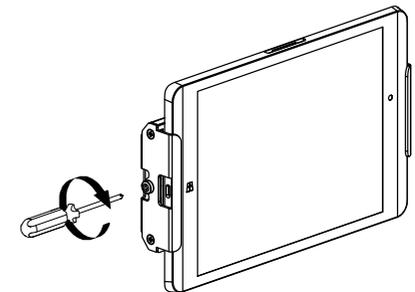

! It is not recommended to tighten
security screw more than 0.5N m
to eliminate risk of hardware damage **!**