
Installation Guide

Installation Guide for SPFLEX

Wall/Counter Mounted

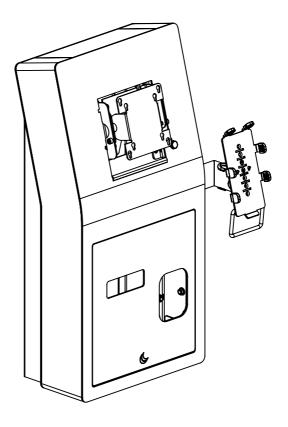





- Please ensure that you read and understand the content of the installation guide before you begin the installation process.
- This product must be installed by a professional installer.
- Please don't power the hardware, until the entire solution is fully assembled.
- This product is designed to be bolted to a wall/counter.
- This product is intended for indoor use only.
- Do not overtighten the fixings.
- If these installation instructions are not followed precisely, it could lead to product failure and potential personal injury.
- It is the responsibility of the installer to use the appropriate fixings for the specific installation location. Please follow the fixing suppliers recommendations for installation.
- This solution is designed for certified hardware and accessories. Always follow the installation guide from the hardware manufacturer for correct installation.
- Ergonomic Solutions / SpacePole inc. cannot be held responsible for any product failure or personal injury, if the installation instructions are not followed correctly.
- Ergonomic Solutions / SpacePole inc. cannot be held responsible for any product failure or personal injury, if any modifications have been made to the product by the customer.

MAINTENANCE

• It is the responsibility of the customer to periodically check the installation and ensure it is clean, all air ventilation holes are free and all fixings are tightened correctly.

Tool list










Box content

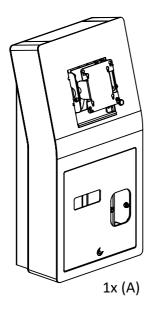



1x (B)




1x (D)



1x (C)

Fixings included for installation:



2x Hex socket flat countersunk M4x10mm

2x Pozi pan head M3x6mm

1x Hex socket flat
 countersunk M4x6mm


2x Hex socket countersunk M4x6mm

1x Pan head M6x12mm

4x Pan head K30x12mm

Box content


Wall Mounted SPFLEX:

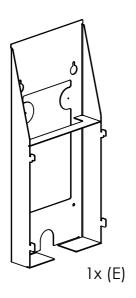

Fixings included for installation:

2x Hex socket head cap M3x5mm

Counter Mounted SPFLEX:

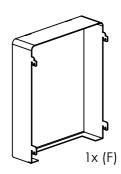

Fixings included for installation:



4x Hex socket button head M6x55mm



4x Washer M6




4x Washer A2



4x Hex lock nut M6


Dimensions [mm]


Step 1:

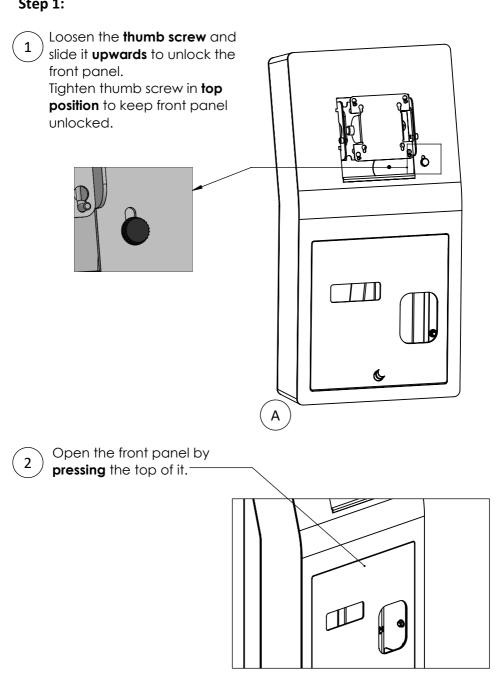

Step 1.1:

To remove Part E/Part F (Wall mount/Counter mount), slide the lever to the left, unlocking Part A from Part E/Part F.

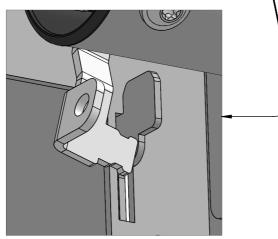

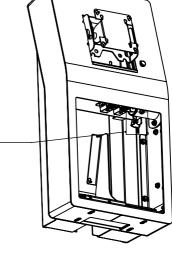


Detach Part

E/Part F (Wall


mount/Counter

mount)

and save for later
installation.

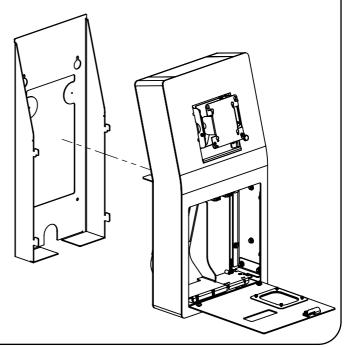


Step 2:

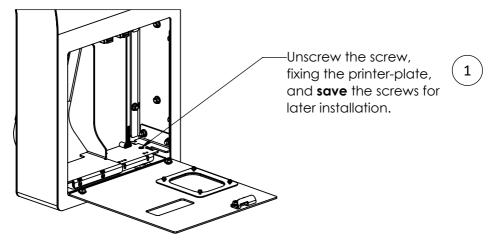


Remove the printerplate and **save** for later installation.



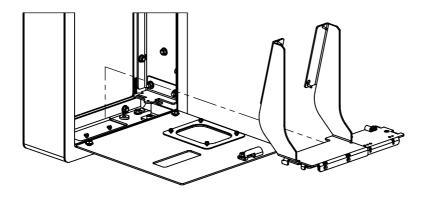


Step 3:

1 Choose the preferred position of the Multigrip plate.

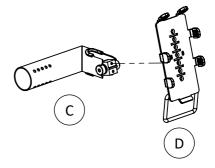

Mount Part C and Part D together using 2x Hex socket flat countersunk M4x10mm.

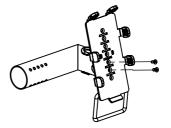


3 Insert Part C into Part A.


Steps Step 3.1: Fix Part C with 1x Pan head M6x12mm.

Step 4:

Fit your printer onto the printer plate saved from **step 2**.
(The printer is not supplied by Ergonomic Solutions).

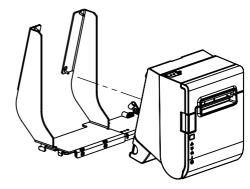


Mount the Printer with 4x Pan head K30x12mm.

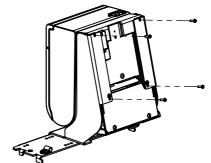


3 Insert printer plate into part A and fasten it with the saved screw from step 2.

NOTE: If the solution is counter mounted, it is recommended to mount it to your counter, before completing step 4. (*For instructions go to step 7*)

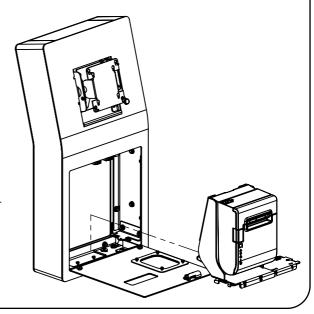


Step 5:

Remove VESA plate from **Part A** by removing 2x **Hex socket head cap M6x8mm.**

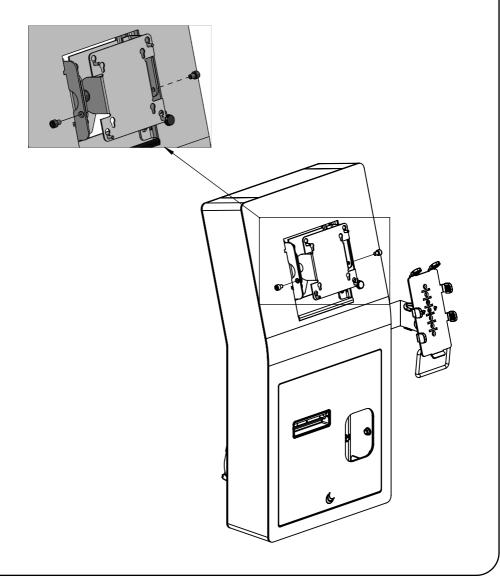


Step 5.1:

1 Fit the VESA plate onto the backside of the screen.

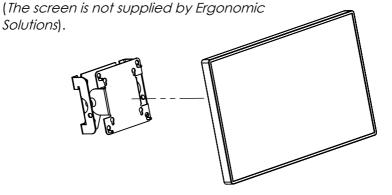


Mount the screen onto the VESA plate with 4x Pozi pan head M3x6mm.

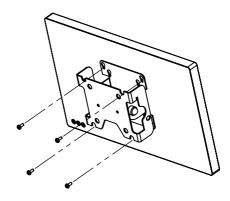


Step 5.2:

Mount the VESA plate back onto Part A with 2x Hex socket head cap M6x8mm.

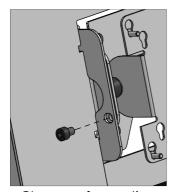


Closeup of mounting points behind screen.

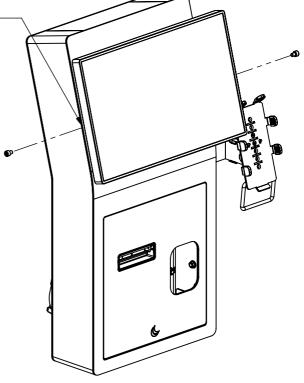

Steps Step 6 (Wall mounted SPFLEX): Mount Part E, with appropriate fixings, to your wall. (*The fixings* are not supplied by Ergonomic Solutions). Attach Part A onto 2 Part E using the four hooks.

Closeup of hook mounting points.


Step 6.1 (Wall mounted SPFLEX):

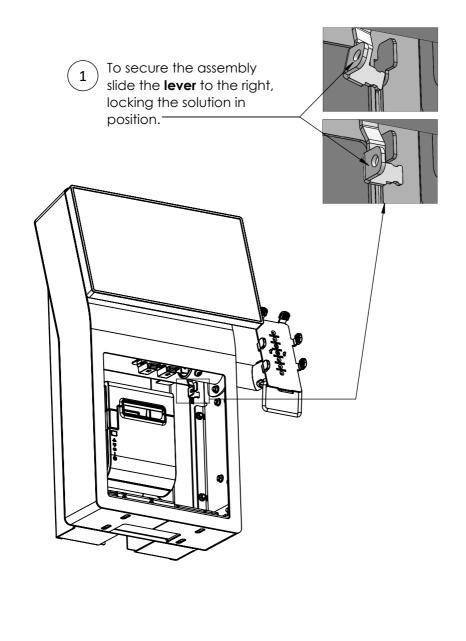


Step 7 (Counter mounted SPFLEX):

Mount **Part A** to your countertop using the fixings (see page 4).


NOTE: Make sure to have access by removing the printer plate and mounting plate. *(See step 4)*

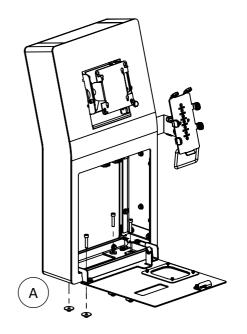


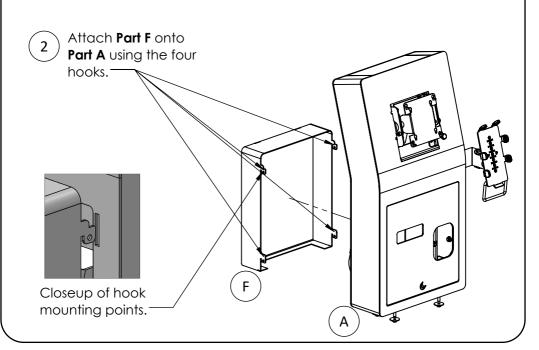

Step 7.1 (Counter mounted SPFLEX):


To secure the assembly slide the **lever** to the right, locking the solution in position.

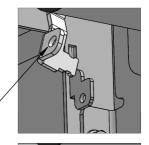

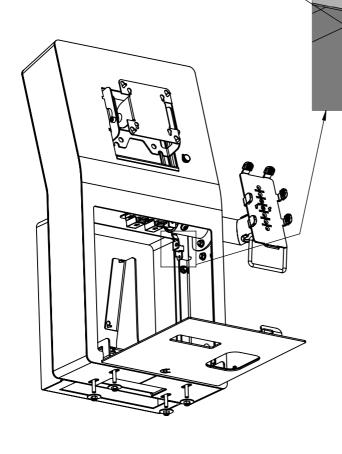



Step 8

Close the front panel.

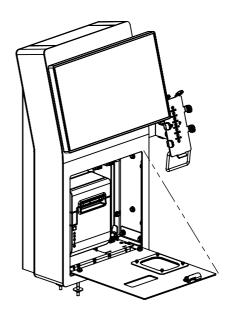

Slide down the **thumb**screw and tighten it to
lock the front panel.

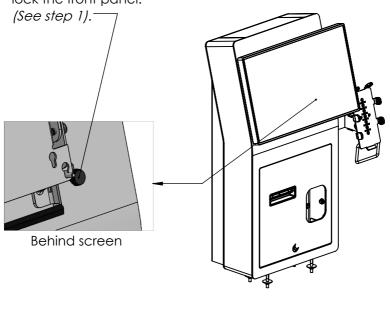

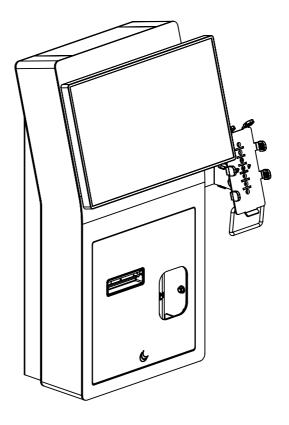

Need help? Contact us



ergonomic.solutions/about/contact-us



spacepole.com/about/contact-us